



# Dipole Antenna

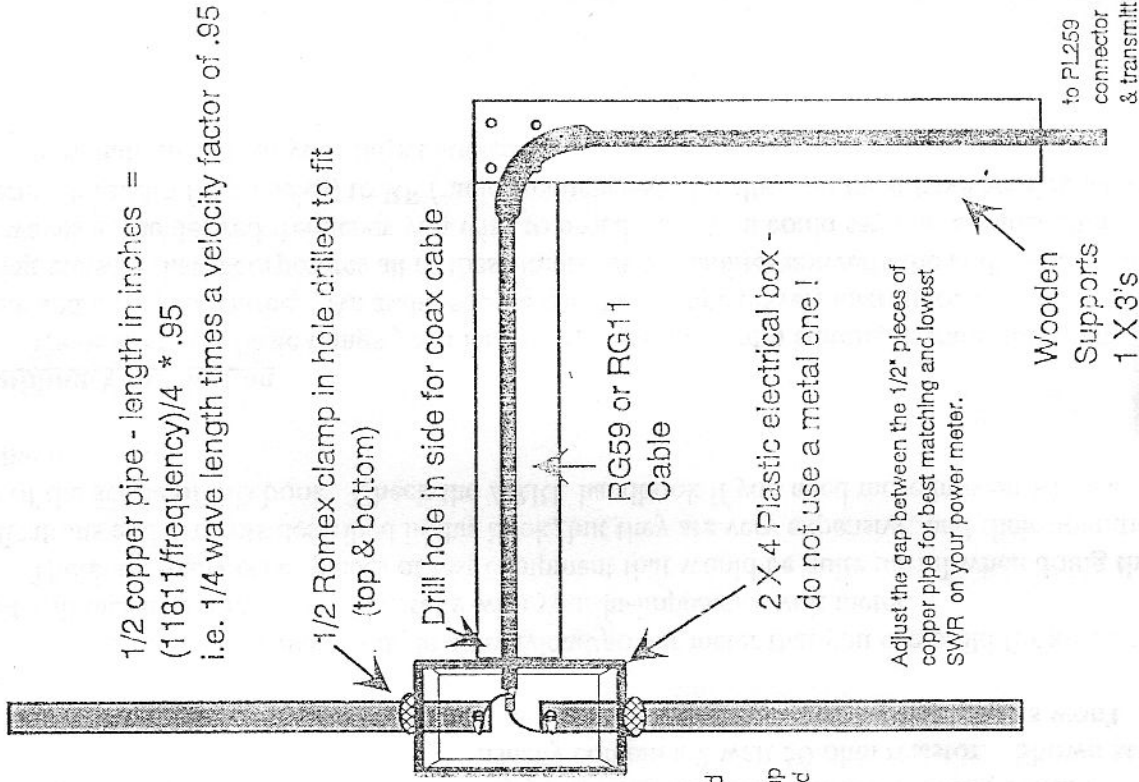

Drill 3/32 hole for # 6 self tapping screws in the end of each piece of pipe and solder terminal lugs to the inner conductor and shield braid of the coaxial cable. Or, crimp style rings could be used.

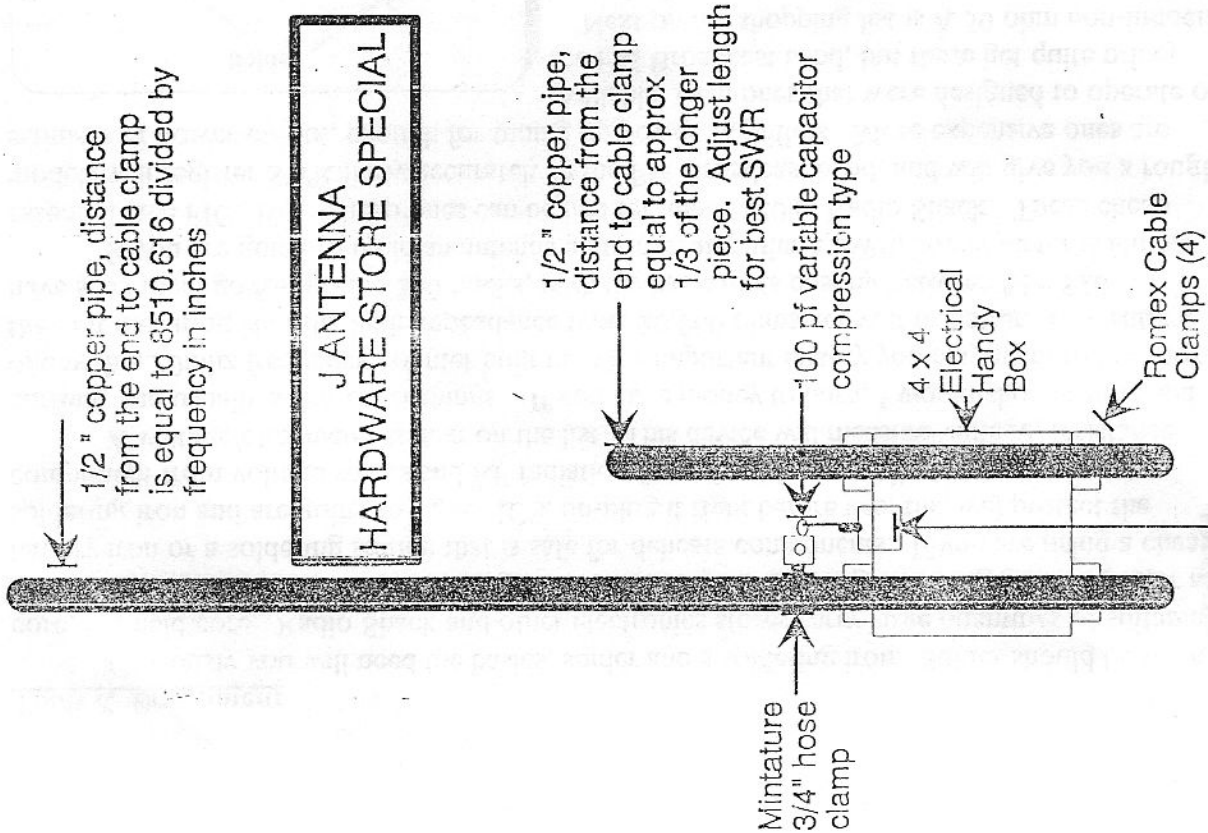

1/2" copper pipe, distance from the end to cable clamp equal to approx 1/3 of the longer piece. Adjust length for best SWR